
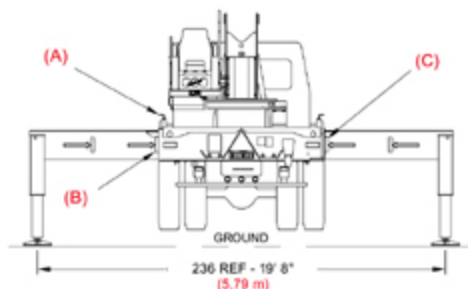


# boom/jib range diagram

6

## 2892S Range Diagram - Fully Extended

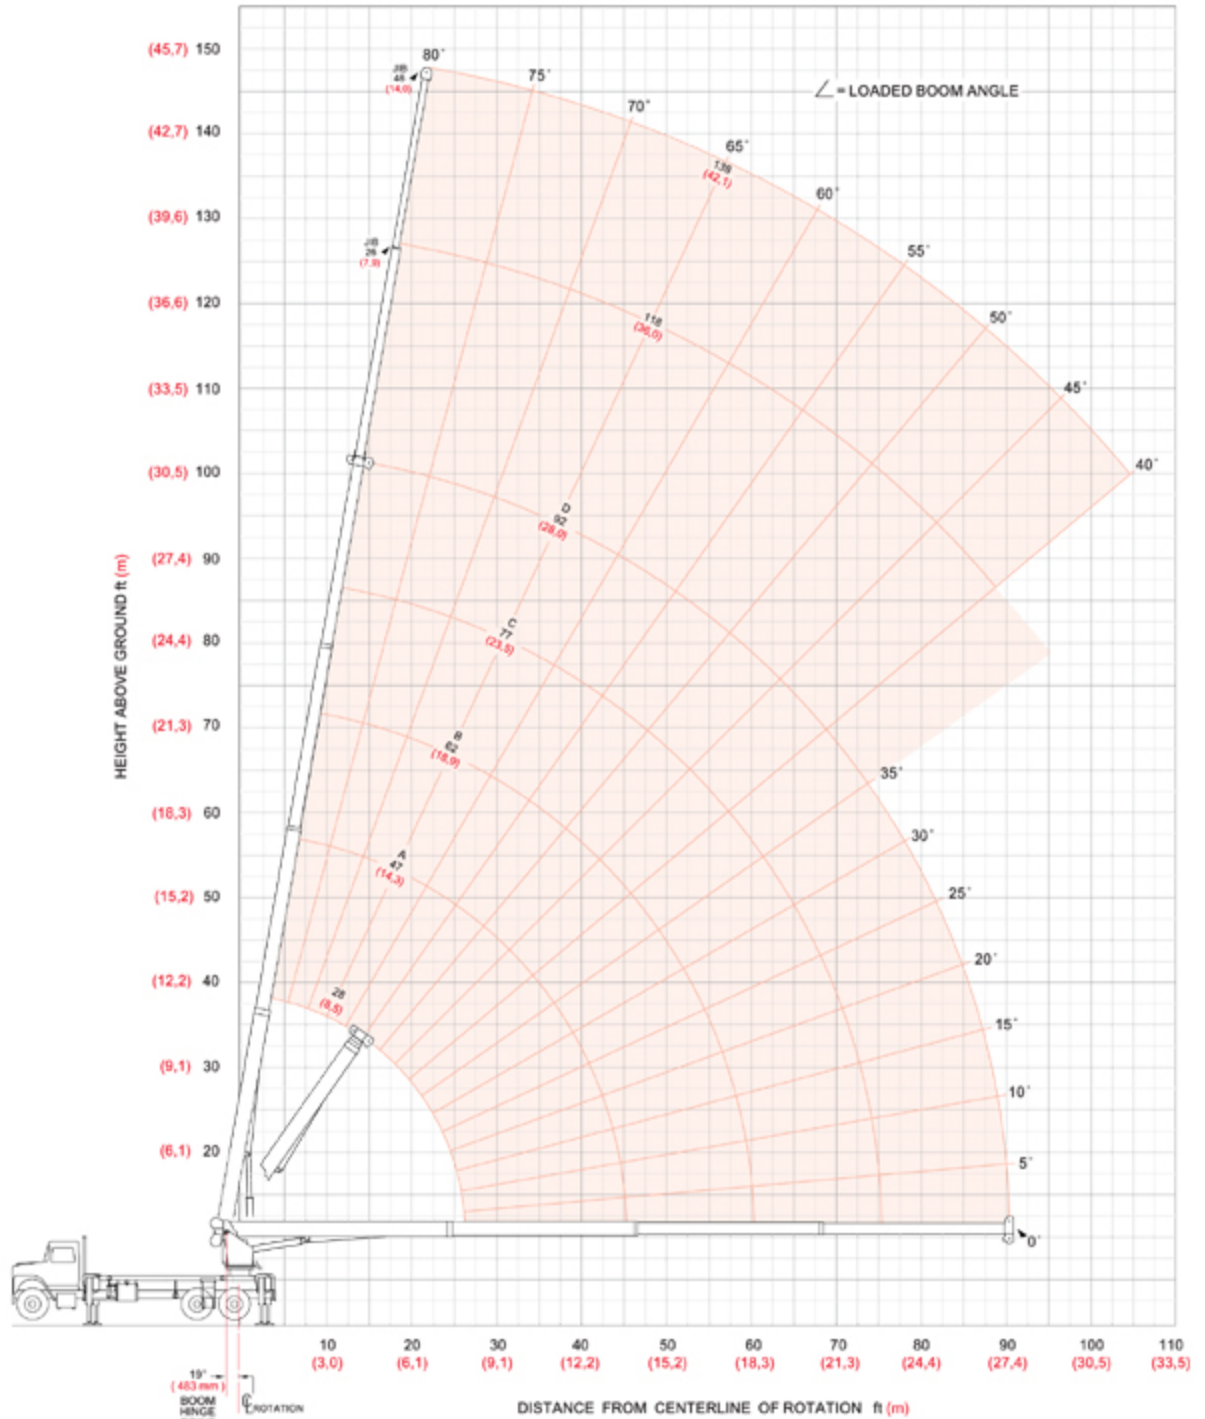

- (A) Pins must be disengaged for this outrigger configuration
- (B) This mark indicates beam is fully extended
- (C) All outrigger beams must be extended to full extend mark

NOTE: Use this chart only when all outriggers are fully extended.

model 2892S

